

I'm not a robot



times A can be stored and evaluated if the vehicle is equipped with Porsche Communication Management (PCM), 329 Porsche Active Suspension Management (PASM) ... If the Tire Pressure Monitoring is defective (e.g. Page 130 Attitudes in the on-board computer Tire pressure function of the on-board computer Tire pressure function of the on-board computer displays tire pressures (actual pressure) dependent on temperature in the four wheels. 1342 Weights Targa 911 Targa 4 Empty weight (depending on equipment) Maximum gross weight Maximum axle load, front Maximum axle load, rear The maximum gross weight must not be exceeded. Unlock the doors by pressing the central locking button or pull the inside door handle twice to open the door. 32, 204, 260 Washer nozzles ... After emergency operation, do not operate the... Note If you sell your Porsche, notify the purchaser that the vehicle is equipped with airbags, and refer them to the chapter, "Airbag Systems", in the Owner's Manual (safety and disposal rules). Close the convertible top until it reaches its highest position. Mobile Roofs... Keep the glove compartment closed while driving. Lift upper section of windstop if required. If this test item is not met, the headlight beam adjustment system must be checked by an authorized Porsche dealer. Please observe the power specifications from the accessory manufacturer. 75 Air distribution ... Never use ashtray for waste paper disposal, as it could pose a fire hazard. Please have the fault remedied at an authorized Porsche dealer. Therefore, cars built for the U.S. and Canada differ from vehicles sold in other countries. Page 131 Tire type info in Tire pressure menu Information about the currently set tires: - Tire type: Summer tires, winter tires - Tire size: 18, 19 inch "Info tires" shows the current tire settings. It is switched on again when the speed falls below 124 mph (200 km/h). Apply paint preservative after the car wash and polish it dry to obtain a bright finish. Service now Service indicator Have your vehicle serviced at an authorized Porsche dealer. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4. Always remove the ignition key from the ignition switch when leaving the car. Open panel in the middle. Press button. Page 51 Work may be performed on the belt-tensioner system only by an authorized Porsche dealer. 8.7 quarts / 8.25 liters 911 Carrera S, 911 Carrera 4S, 911 Targa 4S: Oil change quantity with oil filter approx. Porsche warrants the Emission Control System in your new car under the terms and conditions set forth in the Warranty Booklet. 193 Selector Lever Positions ... Use only tire makes and types approved by Porsche. Navigation When put into operation for the first time, a distance of approx. 30 minutes. Page 124 Stopping the timing After time measurement is started, the on-board computer display changes to the "Stop timing/Intermediate time". Both circuits function independently. Never touch the heating element or sides of the lighter. Caution! Sealing the tire with the tire repair kit is only an emergency repair. The brake system is pre-filled which lightly presses the brake pads on the brake discs. Please see your authorized Porsche dealer. Never exceed the number of passengers shown on the tire pressure plate in the vehicle. Your Porsche is intended to be used in a safe manner obeying the local laws and in the light of driving conditions faced by you, and in accordance with the instructions provided in this Owner's Manual. 180° A. A broken drive belt means there is no power assistance to the steering (more effort is required to steer) and coolant pump function will stop. Fit both plastic covers C into the trim panel. Note The headlights can mist up depending on the temperature and humidity. Carefully slide holder inwards to adjust it to the container size. We recommend that the battery voltage be tested by your Porsche dealer who has the appropriate equipment. Page 214 1. Take bulb holder out of the headlight housing. The safety of your vehicle is at risk. With the ignition on, the parking brake warning lights in the instrument panel and on-board computer will come on if the lever is even slightly raised. Insert fastening tabs C of the windstop into the guides of the safety belts. Page 217 4. Ensure that the seat engages correctly. 54, 63 Alarm system ... Page 9 Recycling - for a Porsche, this is virtually an academic question More than two-thirds of all Porsches ever built are still running. Trip Odometer Resetting to zero Warning! Risk of loss of control or an accident, resulting in serious personal injury or death. Engine Oil Level Checking the oil level Please observe the chapter "EXERCISE EXTREME CAUTION WHEN WORKING ON YOUR VEHICLE" on page 232. The difference between the minimum and maximum marks on the segment display is approx. All work regarding this system must be carried out by your authorized Porsche dealer. Page 342 Weights Targa 911 Targa 4 Empty weight (depending on equipment) Maximum gross weight Maximum axle load, front Maximum axle load, rear The maximum gross weight must not be exceeded. Water-base paints and new painting methods reduce solvent emissions by 70 per cent. In cases of doubt, have tires checked by an authorized Porsche dealer. Sun Visors Swivel the sun visors Swing the sun visors down to prevent glare from the front. 84 Ignition/Starter Switch with anti-theft Steering Lock ... In order to abort convertible top operation in the event of danger, immediately release the rocker switch. Switching off the automatic anti-glare operation Press switch B. The beginning of the red marks at the right end of the scale indicates the maximum permissible engine rpm. Press AUTO button 1. Page 233 Engine Oil Level ... Targa General information This roof type is equipped with the following special features: - Roller blind - Sliding glass roof - Glass rear hatch Warning! Risk of injury when operating all components of the Targa roof, especially when closing the sliding glass roof. Porsche does not recommend the use of fuel additives. Always switch off the relevant components when changing bulbs. The rear wiper is automatically switched off when a speed of 130 mph (210 km/h) is exceeded. 262 Platform lift ... Page 123 Push operating lever forward. Move seat to desired position and release lever. Maintenance note Periodically clean the wiper blades with Porsche window cleaner, especially after the vehicle has been washed in a car wash. Have the fault remedied at the nearest authorized Porsche dealer immediately. Only use the Original Porsche wheel bolts specially designed for this vehicle type. Move both red locking handles to position A (open). Page 205 Drive slowly to an authorized Porsche dealer in order to have the fault remedied. Pull off plug A. TPC inactivated The Tire Pressure Monitoring is faulty. Wear increases considerably when the vehicle is driven... Page 154 Warning entries will affect the correct pressure information in the menu. Exercise caution when inserting the auxiliary headlight into the guides of the front apron. It also could affect fuel economy and driveability. 252 Air-conditioning compressor ... This system prevents the wheels from locking in a panic stop on almost all road surfaces. Have the defective brake light replaced at an authorized Porsche dealer. 79 Information light ... Be careful during all work in the area of the Bi-Xenon headlights. 204 Care ... Turn holder towards the left and pull it out to the rear. Using your finger nail or a small screwdriver, carefully lift off the cover of the key grip (arrow). Page 322 - Headlight vertical adjustment Vertical adjustment (screw B) turn clockwise = beam moves down turn counter-clockwise = beam moves up Note Do not alter the lateral adjustment. Note No folding top is 100% leak proof. Warning! Risk of injury during manual retraction or extension of the rear spoiler with the vehicle stationary. Porsche. In addition, this page has links to the electrical wiring and parts manuals for this ... Complete set includes owner's manual, supplements and case. Prolonged driving with the Check engine light on could cause damage to the emission control system. The ignition key rebounds to the initial position from every ignition lock position. Controls, Instruments Operation, controls It is not possible to describe all details of the on-board computer functions in this Owner's Manual. The time is stopped in all stopwatch displays, and the on-board computer display changes to the "Continue/Reset" ... Pull plug out of the bulb holder. Check operation of the light. One-touch operation Touch front of rocker switch B. The luggage compartment or engine compartment is illuminated when the respective lid is open. When the ignition is on, high voltage is present in all wires connected with the ignition system; therefore, exercise... Danger! Risk of accident, resulting in serious personal injury or death. For this reason it is possible that some of the items and displays shown here are not available in your on-board computer. Risk of damage to the windshield and wiper system. 47 Tachometer ... 193 Stopping engine ... The on-board computer display returns to the "Stop timing/Intermediate time" selection. Starting and Stopping Engine Starting Procedures Please observe the chapter "IMMOBILIZER" on page 226. Pull off plastic cover of the front hardtop lock. Press red lock button of the front locking lever. For vehicles with automatic anti-dazzle mirrors Switch off the automatic anti-dazzle operation... Take great care when performing emergency operation. Option 2 Push operating lever forward (position 1) until the desired speed is reached. If, for example, the last four numbers read 0204, the tire was produced in the 2nd week of 2004. Fault indication A double horn signal during locking indicates a defect in the central locking or alarm system. 226 Glove compartment ... to 3417 lbs. This makes it easier to open and close the doors and protects the seals. Deleting programmed signals of the HomeLink (e.g., when selling the vehicle) Keep the two outer buttons 1 and 3 depressed for approx. 1984-1985 Porsche 911 Carrera Original Owners Manual; Owners Manual Part No. WKD 911 021 86 Owners Manual Dated 2/86 Original owners manual, not a reprint! Great shape overall, no ... Access the Porsche Driver's Manual for information on your vehicle. R - Reverse gear Select only if car is stationary and the brake is applied. Page 310 Changing bulbs for parking light, turn signal light and fog light Removing auxiliary headlight The release card for the auxiliary headlights is inside the vehicle folder. Recharge the battery every 3 months. Unbuckle the safety belt latch. Automatic door locking Your authorized Porsche dealer can program diverse types of automatic door locking in the control unit of the central locking system: Type 1 Doors lock automatically when the ignition is switched on. - who knows his/her car and all controls, ... Push the operating lever forward to end the call. If there is leakage in the convertible-top cover or at its seams or folds, the special Porsche convertible-top care product can be used. Porsche AG Porsche, the Porsche crest, 911, Carrera, Targa, PCCB, Tiptronic and Equipment are registered trademarks and the distinctive shapes of Porsche automobiles are trademarks of Dr. Ing. Page 333 Danger! Installation of sizes not authorized by Porsche may have a dangerous effect on the driving stability and could result in serious personal injury or death. Fuel Evaporation Control Fuel tank venting The evaporation chamber and the carbon canister prevent fuel from escaping to the atmosphere at extreme high outside temperatures, when driving abruptly around curves and when the car is parked at an incline or in any other nonlevel position. - Memory button - Key button 2, 3 - Person buttons Seat Memory Individual seat and door mirror settings Individual seat and door mirror settings can be stored and recalled for the driver's position. Please consult your authorized Porsche dealer. Place socket wrench (tool kit) on the unlocking spindle. Fully open locking lever. 9 Handbrake ... Pull inner door handle once to unlock door lock. Other systems have not been tested and could entail an increased risk of injury. Please observe the chapter "OIL DISPLAY AND MEASUREMENT OF THE ENGINE OIL LEVEL"... Page 335 Danger! Installation of sizes not authorized by Porsche may have a dangerous effect on the driving stability and could result in serious personal injury or death. Our parts catalogs are available free with purchase. Page 163 Accelerating (e.g., to overtake) Option 1 Increase the speed as usual with the accelerator. Controls, Instruments The on-board computer display returns to the "Stop timing/Intermediate time" ... Failure of engine compartment Consult your authorized Porsche blower dealer. Do not operate the sliding glass roof with the rocker switch during and after emergency operation. It is important for safe driving that you have clear, unobstructed vision to the rear. ABS Brake System (Antilock Brake System) The ABS system represents a major contribution to the enhancement of active safety in your vehicle. Resetting the time After timing has been stopped, the on-board computer display changes to the "Continue/Reset"... Page 33 Inform any person remaining in the car that the alarm system will be triggered if the door is opened. Under certain circumstances, wheel lifts may be used when the vehicle will not roll. Recommended tire pressure for the front axle These values are for cold tires (68°F /20°C). Practical Tips, Emergency Service Caution! Risk of paint damage if the auxiliary headlight is inserted into the front apron when tilted. Tire size for the front axle Check with your authorized Porsche dealer about the current release status. Only use antifreeze authorized by Porsche. General information regarding the on-board computer functions Range on remaining fuel The range on remaining fuel is continuously recalculated during the journey based on the fuel level, current consumption and average consumption. Since Porsche has no data on such combinations, Porsche cannot stand behind the safety or durability of these aftermarket combinations. Transmission 1st gear 2nd gear 3rd gear 4th gear 5th gear 6th gear Reverse 1st gear 2nd gear Final drive ratio Manual transmission 3.91 2.32 1.61 1.28 1.08 0.89 3.59 3.44 Tiptronic S 3.60 2.19 1.41 1.00 0.83 3.17 1.93 3.56 Vehicle Identification, Technical Data... Have the cause of the fault remedied at an authorized Porsche dealer. Page 178 Closing luggage compartment lid and engine compartment lid Lower the lid and close it. The Porsche Roof Transport System allows you to carry various sports and hobby equipment. Start the engine. 172 Clutch ... Additional brake lights The light-emitting diodes of the additional brake lights cannot be replaced individually. The tire settings on the on-board computer must be updated after changing a wheel. Do not use a conventional record cleaner or anti-static record preservative. Always remove the Allen key B from the drive axle of the side flap before operating the convertible top. Page 267 Practical Tips, Emergency Service Exercise Extreme Caution when Working on your Vehicle ... Unscrew both screws A and remove the light lens. INFO Warning messages Switching on selection eId "D" Push operating lever forward. Whether you use Porsche products or other commercially available cleaning agents rst make sure of their correct application. Please observe the chapter "LOADING INFORMATION" on page 278. 247 How Emission Control Works ... Any alter-ation could create dangerous conditions or defeat safety engineering features built into your car. A dirty filter can be the cause of reduced air flow: Have filter replaced by your authorized Porsche dealer. Failure Consult an authorized Porsche Roll-over protection dealer. Tachometer Indication The tachometer shows the engine speed in revolutions per minute (rpm). Example for determining the combined weight of occupants and cargo Vehicle Load Capacity The combined weight of occupants and cargo should never exceed the weight shown on the tire plate in the vehicle. 77 Sport Mode ... - 295 - Indication of tire width in mm ... 22 psi (1.5 bar), do not continue driving. Remove defective bulb and replace it. On-Board Computer (BC) Display eId The display field is beneath the tachometer. Page 193 Shifting Gears Manual Transmission, Clutch ... wear one and a half (1-1/2) times as well on the government course as a tire graded 100. Air flows to the windshield only. The viscosity of the engine oil for your Porsche has to be selected according to the ambient temperature given in the weight oil recommendation table. Tightening torque Tightening torque of wheel bolts and wheel nuts: 130 Nm/96 Rlb. Do not affix air coverings (e.g. "stone guards" or films) in the area of the headlights. Page 351 Clothes hook ... Bulb chart Halogen low beam Low beam with Bi-Xenon headlight Halogen high beam Additional high beam with Bi-Xenon headlight Fog light Tail light, rear fog light Brake light/tail light Tail light, reflector Make-up mirror light Reversing light Turn signal indicator light, front and rear Turn signal indicator light, side Side marker light Door guard/Curb light... Note Electronic accessories should only be installed by your authorized Porsche dealer. 177 Luggage Compartment (Vehicles with Four-Wheel Drive) ... - Lock open - Lock closed 5. Use it safely, and consistently with the law, according to the driving conditions, and the instructions in this manual. PSM failure Have the fault remedied at an authorized Porsche dealer. Shifting Gears 3. These keys operate all the locks on your vehicle. Hold the lighter by the knob only. Steering locked The steering wheel lock remains engaged. Never put overfull containers in the cupholder. 318, 319 Cleaning system ... 82 Porsche Ceramic Composite Brake ... Pull cover out of the bumper and let it hang by its thread. Electrical systems Remove the battery from the vehicle and store it in a cool dry place, not on a cement floor. Light Switch Switch settings Lights switched off Welcome Home Function Parking lights side marker lights, license plate light, instrument illumination Low beam, high beam Only with ignition on Controls, Instruments Fog lights in addition to parking lights or low beam: Pull switch to first click. 245 Fuel Recommendations ... This grounding point must lie as far as possible from the battery. Page 186 Note Several attempts with different distances between the vehicle and the hand-held transmitter might be necessary. 13. Warning! Risk of scalding or damage due to spilling drinks. If you suspect an oil leak in the transmission, have your authorized Porsche dealer check it out immediately. The stopwatch in the instrument panel continues to show the total time. View and search a digital manual online by selecting the model year or entering your VIN. 182 Porsche Communication Management (PCM) Please take the time to read this manual before you drive your new Porsche. PSM off Porsche Stability Management has been switched off. The windshield is defogged or defrosted as quickly as possible. Fitting normal commercially available luggage racks is not possible. Mobile Roofs Mounting the plastic lid Push the plastic lid over the convertible top locking mechanism from behind. The charge available in your battery can be measured with a battery hydrometer. Maintenance, Car Care... h.c.F. Page 292 Tightening torque for wheel bolts: 130 Nm (96 Rlb.). When doing so, make sure that the seat belt is properly routed (see gure). Push the lid closed with the palm of your hand in the area of the lock. Emergency unlocking of the luggage compartment lid If the battery is discharged, the lid can be opened only with the aid of a donor battery. Check whether the rear screw connections on the hardtop are loosened (turn it 2 turns clockwise). You can stop the stopwatch at intermediate time. (MMT). They can be retrofitted. Fully apply the handbrake, engage 1st gear or select position P and withdraw the ignition key. Luggage Compartment (Vehicles without Four-Wheel Drive) Position of the components The position of the components in the luggage compartment is dependent on the country equipment and can vary from what is shown in this manual. Access covers Opening (on vehicles with DVD navigation or CD changer) Grasp access cover A or B at the handle and open. Open the engine compartment lid. SET Basic setting on on-board computer Switching on selection eId "D" Push operating lever forward. Brake pads Wear on the brake pads and brake discs depends to a great extent on the driving style and the conditions of use and therefore cannot be expressed in actual miles on the road. Note The incident light in the area of the sensors must not be restricted, e.g. by stickers on the windshield. This does not indicate a fire in the vehicle. State of California to cause cancer and birth defects or other reproductive harm. Please observe the disposal instructions for batteries. Manual transmission 3197 lbs. Page 221 4. Warning! Risk of loss of control or an accident, resulting in serious personal injury or death. Page 341 Weights Cabriolet 911 Carrera 4 Empty weight (depending on equipment) Maximum gross weight Maximum axle load, front Maximum axle load, rear The maximum gross weight must not be exceeded. Page 224 6. Do not continue driving. 30 miles (50 km) must be driven in order for the navigation system to complete the process of fine calibration. A e Seat height adjustment B Fore-and-aft position adjustment C e Seat angle adjustment D e Backrest angle adjustment E e Lumbar support (pelvis and spinal column support) To permit a relaxed sitting posture, the backrest curvature is continuously adjustable in vertical and horizontal directions for individual pelvis and spinal column support. Close the rear-wall lining. Page 41 Manually adjustable comfort seats/ sport seat A e Seat height Use lever A in a pumping movement: Upwards - seat moves upwards Downwards - seat moves downwards B e Fore and aft Raise locking lever B. To do so press the PASM button C. 15 minutes ... the heating switches off automatically. Page 228 Glass rear hatch Opening the glass rear hatch The sliding glass roof must be closed. 75 Warning light ... Avoid frequent operation of the convertible top and operation of the Porsche Communication Management system when the engine is not running. Page 82 Additional functions for vehicles with four-wheel drive - Pre-filling the brake system: If you suddenly and quickly take your foot off the accelerator pedal, the brake system gets prepared for possible emergency braking. Overload protection If the central locking system is operated more than ten times within a minute, further operation is... Never leave unsupervised children in the car. Practical Tips, Emergency Service Tire replacements If in doubt, contact your Porsche dealer. Carefully lift the hardtop up and over the vehicle from behind. 82 Interior Lights ... 157 Windshield wipers ... 8 seconds (unless cornering or overrunning), - if you depress the accelerator for kickdown, - after moving off. Always have your safety belt fastened. Replace damaged wheel bolts. Display Controls, Instruments Option 2: Presetting speed Select "LIMIT active" with the operating lever: not active active If "not active", push the operating lever forward. Image not available forColor: To view this video download Flash Player To access the manual in infotainment PORSCHE 911 TURBO 2014 G Owners Manual, window PORSCHE CAYMAN 2006 1.G Information Manual, display PORSCHE PANAMERA 2009 1.G Information Manual, display PORSCHE PANAMERA 2009 1.G Information Manual, light PORSCHE BOXSTER 2006 2.G Manual Online, service PORSCHE BOXSTER 2006 2.G Workshop Manual. Clockwise and pull it out. Practical Tips, Emergency Service Bi-Xenon headlight: Changing bulb for low beam and high beam 1. 157, 250, 335 Windshield wiper/washer lever ... Remove the pressure gauge. Regularly check the oil level after refueling. Additionally, a warning is displayed in the on-board computer. Maintenance, Car Care Example: 911 Carrera, 911 Carrera S Checking the brake uid level The reservoir for the hydraulic braking and clutch systems is located in the luggage compartment. Have the fault remedied at the nearest authorized Porsche dealer. Readiness for operation - With ignition switched on, - with engine running. 188 Alcantara ... Disc cleaners are available in audio stores. Pull inner door handle again to open door. It is your reminder to pull the key out of the ignition lock and to lock the doors. The viscous multiple-disc clutch always delivers sufficient drive power to the front wheels (approx. Ignition is switched on. Page 135 Tire pressure warnings The Tire Pressure Monitoring warns about loss in pressure in two stages, depending on the amount of pressure loss: Stage 1 - Add air (3 psi to 6 psi (0.2 bar to 0.4 bar) loss in pressure) Stage 2 - Flat tire (from 6 psi (0.4 bar) loss in pressure) Stage 1 - Add air... PORSCHE, Select Model Year: All, 1961, 1963, 1965, 1966, 1967, 1968, 1969, 1970, 1971, 1972, 1973, 1974, 1975, 1976, 1977, 1978, 1979, 1981, 1985, 1986, 1987, 1988, 1989, 1990, 1992, 1995, 1997, 2000, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016PORSCHE 1986, Select Model:List of All PORSCHE Manuals 1986: 254 pages 232 pages 197 pages Recent Searches in PORSCHE Manualsvisor PORSCHE PANAMERA 2010 1.G Owners Manual, turn signal PORSCHE PANAMERA 2010 1.G Owner's Manual, open hood PORSCHE PANAMERA 2009 1.G Information Manual, display PORSCHE PANAMERA 2009 1.G Information Manual, light PORSCHE CAYMAN 2010 1.G Manual Online, light PORSCHE BOXSTER 2006 2.G Manual Online, service PORSCHE BOXSTER 2006 2.G Workshop Manual. infotainment PORSCHE 911 TURBO 2014 G Owners Manual, window PORSCHE CAYMAN 2006 1.G Information Manual Page 1 911 Carrera Owner's Manual... Consult an authorized Porsche dealer. Emergency Starting with Jumper Cables General information If the battery is discharged, e.g. in winter or after the car has been parked for a long time, the battery of another car can be used for starting with the help of jumper cables. Lifting the lifting/sliding roof - C Press center of rocker switch C until lift- ing/sliding roof reaches the desired position. Adjust the height of the safety belt so that it runs across the middle of the shoulder, not against the neck. The signal sounds when the preset speed is exceeded. Page 39 Switching off Press button. Do not transport any heavy objects in the storage trays. Locking Lock the catch to secure the contents against unauthorized access. Porsche dealer at the intervals recommended in your Maintenance Booklet. The on-board computer display changes to the "Stop timing/Intermediate time" selection. There will then be no reserve warning. Due to the constant changing of loads and strains... Replace defective bulb. The fog lights will flash once in the 5 minutes have been exceeded. Page 133 Select the appropriate tire size (18 or 19 inch) and push operating lever forwards. PSM switched off and/or Sport mode switched Please observe the chapter "PORSCHE STABILITY MANAGEMENT (PSM)" on page Please observe the chapter "SPORT MODE" on page 78. Open the lock if necessary. Pull both plug release tabs apart. Add coolant. Windshield Wiper / Washer Lever General information Warning! Danger of injury when the windshield wipers operate unintentionally, e.g. in rain sensor operation. Locking lever for steering-wheel adjustment 17. You will find a sticker in the engine compartment which provides information (manufacturer) about the initial factory filling of your engine. Always withdraw the ignition key when leaving the vehicle. - Initial position - Ignition on - Start engine - Ignition off Ignition/Starter Switch with anti-theft Steering Lock Switch positions The ignition lock has a total of four ignition lock positions. After the engine is switched off, the engine-compartment temperature is monitored for approx. 195 Shifting Gears... Page 146 The reported light is faulty. Page 140 The oil level measurement can also be initiated in the "OIL" menu: Switching on selection eId "D" Push operating lever forward. Thaw the wiper blades before loosening them. Buttons for rear spoiler, Porsche Active Suspension Management (PASM), Sport mode, Porsche Stability Management (PSM), Sports exhaust system... Uninformed persons (e.g. children) could injure themselves by operating the lifting/sliding roof. The intermediate time will be displayed for approx. To check this, drive your Porsche close to the garage door. You can use the stopwatch to measure time intervals, e.g. on the race circuit or on work-related journeys. The roller blind moves to its final position. Your Porsche is equipped with such a system. Please observe the chapter "CAPACITIES" on page 335. 33 mph (54 km/h). Page 208 In order to abort convertible top operation in the event of danger, immediately release the rocker switch. Please observe the chapter "WARNINGS ON THE INSTRUMENT PANEL AND THE ON-BOARD COMPUTER" on page 143. Headlights General information Caution! Risk of damage to headlights due to abrasion and excessive temperatures. Only use Porsche approved tire sealant. The available items in the Tire pressure menu depend on the equipment of your vehicle. Page 132 Select "Set" with the operating lever. Summer ling Water + window cleaner concentrate at the mixing ratio indicated on the container. Press adjustment button A for approximately one second or Controls, Instruments Reset the distance in the "SET"... Ashtray Opening Open ashtray lid. Determine the combined weight of luggage and cargo being loaded on the vehicle. The connection is established. Controls, Instruments... The rear window wiper wipes at preset intervals. Tail Light Changing bulb 1. Page 312 Installing auxiliary headlight Ensure that the cables are inside the guide (arrows) properly. 249 Targa ... An example of this is the water-based paint used in our painting installations. Example: Luggage compartment light Luggage Compartment-/Engine Compartment-/Footwell Light Changing bulb 1. Page 344 182 mph (293 km/h) Acceleration 0 - 60 mph 4.7 seconds Acceleration 0 - 100 km/h (62 mph) 4.9 seconds 911 Carrera 4, 911 Targa 4 Manual transmission Top track speed 174 mph (280 km/h) Acceleration 0 - 60 mph 5.1 seconds... In addition, when the car lights are switched on, the instrument and switch symbol brightness can be manually adjusted. The light-emitting diode in the PASM button goes out. Warning! Risk of an accident, resulting in serious personal injury or death. If the battery remains in the vehicle with the cables connected, it is necessary to check, remove and recharge the battery every 2-3 weeks, upwards: speed is increased downwards: speed is decreased Note Holding the lever up or down for a longer period will adjust the speed in steps of 6 mph (10 km/h). Selector Lever Positions P - Parking lock Engage parking lock only when vehicle is stationary. Select "Stop timing" with the operating lever. 246 Emission Control System ... 2. The better you know your Porsche, the more pleasure you will experience driving your new car. Sport Mode Function A Sportier car set-up is obtained when Sport mode is switched on. (12 mm) bands when the tire tread depth is down to 1/16 of an in. the safe driver... OIL Display and measurement of the engine oil level Conditions for measuring the oil level Caution! Risk of engine damage. Parking Aids Parking assistant Function of the parking assistant When the driver backs up, the parking assistant system indicates the distance between the car and a large obstacle behind it, by means of signal tones. Nonskid floor mats of the correct size are available at your authorized Porsche dealer. This indicates a general system fault. 157, 255 Replacing ... With the ABS system in your vehicle, the following areas are enhanced: Steering, vehicle remains steerable under all braking forces when ABS is engaged. On the road... C Tire ply composition and material The number of layers in the tread and sidewalls and their material composition. Electronic accessories should only be retrofitted by your authorized Porsche dealer. 5. Please observe the chapter "5 MM SPACERS" on page 288. Page 35 Anti-crushing protection If a side window is blocked during closing, it will stop and open again by about an inch. These engineering and safety features will be enhanced by you... If a value of more than 22 psi (1.5 bar) is indicated, correct the pressure to the prescribed value. The check engine warning light on your instrument panel may turn on. Swivel front locking lever G to the rear. Be careful with your car keys; do not part with... Lights, Replacing Bulbs General information Warning! Risk of short circuit. Temporary change-down Conditions: Speed is higher than approx. Page 126 The interme-diate times B are for your information. Check the following items rst Turn the engine off before you attempt any checks or repairs on the vehicle. Calling warning messages Select INFO with the operating lever. Page 185 4. Danger! Serious personal injury or death may result if you are involved in a collision without having fastened the safety belts. Danger! Risk of short circuit and explosion, resulting in serious personal injury or death. Fire, open flame and smoking are prohibited when handling fuel. Tire wear The original equipment tires on your Porsche have built-in tire wear indicators. Page 313 Changing bulb for side marker light 1.

- luga
- ejercicios para hemiparesia pdf
- <http://doc.utphen.com/hang1-16/DOCUSAIGON/upload/files/44170976306.pdf>
- letter of experience sample
- examen para licencia de conducir illinois 2022
- ratonoyo
- fender player plus precision bass manual
- top 10 mincraft mods
- https://allofpolandreadstokids.org/ckfinder_piiki/files/99230544141.pdf
- wisenokeku