

I'm not a bot





P. page 1 Bottom Freezer Refrigerator U. s. e. & u. r. e. G. u. i. d. e. Congelador con congelador inferior Guu deus0 y Cu\_dud00 p\_o33 RGfrigrGateur \_compartment congGlateur infGrieur Guide d "u. H. su. on e. d" +n. re. jeno pu e 65 " -trio 596.75522400, 596.75523400, 596.75524400, 596.75529400, 596.75532400, 596.75533400, 596.75534400, 596.75539400, Part No. 12828112 Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A. P. age 2 Instamlation ..... 7-13 Location Pullout Freezer Drawer Reinstallation of the Doors Measuring the Opening Door Reversal Transporting Your Refrigerator Handles Leveling Drawer Removal Connecting the Water Supply Opening and Closing Your Fresh Food Doors Temperature Controls ..... Touch Temperature Controls Fresh Food Features... Importnt Snfety Instructions Installer: Please leave this guide with this appliance. To reduce risk of injury or death, follow basic Consumer: Please read and keep this Use & Care precautions, including the following: Guide for future reference, it provides the proper use and maintenance information. P. age 4 Importnt Snfety Instructions To reduce risk of fire, electric shock, serious not attempt service if instructions are not under- injury or death when using your refrigerator, stood or if they are beyond personal skill levek follow these basic precautions, including the Always disconnect refrigerator from electrical... It excludes original Kenmore ice and water filter cartridges, which Sears will replace, free of charge, for only 30 days from the date of purchase, if defective in material or workmanship. We Service E. Expert service by our 12,000 professional repair What We Sell. specialists Your Kenmore \_ product is designed, manufactured d Unlimited service and no charge for parts and tested to provide years of dependable operation. Given article text here The installation materials required for your refrigerator include flexible copper tubing, a shut-off valve, and basic precautions to ensure safety. It is essential to follow the instructions carefully to avoid injury or death. Your new refrigerator features two independent fresh food doors, each with its own SmartSeal feature that forms a seal when both doors are closed. The temperature controls are located at the top front of the refrigerator compartment and can be adjusted according to your preference. To ensure safe storage, it is recommended to store dairy products in the Dairy Center, which provides convenient door storage for spreadable items. Never attempt to adjust a shelf loaded with food, as this may cause injury or property damage. The Crisper Drawers provide a humid environment for fresh fruit and vegetable storage. To remove the drawer, simply lift the lid, pull it out to full extension, tilt up the front, and straighten out. The ice maker should be turned off when the water supply is shut off for several hours. During initial use, allow about a one- to two-minute delay in using the water dispenser to allow the internal water tank to fill. Do not use the dispenser during this time to avoid serious illness or death. The refrigerator's water filter cartridge model 469006-750 has specifications and performance data that include a service flow rate of 0.78 GPM and a rated service life of 750 gallons. Food Storage Tips When purchasing, ensure the quality of food items. - Dairy products like butter have a shelf life of 1 to 6 months and should be stored tightly wrapped or covered. - Milk and cream are not recommended after one week. For vegetables: - Asparagus can be stored for 1 to 2 days and should not be washed before refrigeration; store in a crisper instead. - Brussels sprouts, broccoli, cauliflower, green peas, lima beans, onions, and peppers have varying shelf lives of 3 to 5 days and should be wrapped odious foods. - Cabbage and celery can be stored for 1 to 2 weeks. To avoid costly mistakes, Sears recommends professional installation for home appliances. For the Bottom Freezer Refrigerator model, refer to page 33 in the user guide (Spanish: Guía de uso y cuidado del refrigerador con congelador inferior). The guide is also available in other languages. Important safety instructions: \* Installer: Leave this guide with the appliance and follow basic precautions to avoid injury or death. \* Consumer: Read and keep this guide for future reference, as it provides essential information on proper use and maintenance. Page 36 highlights crucial safety measures to prevent fire, electric shock, and serious injury when using your refrigerator. Always disconnect the appliance from electricity before performing any service. Additional notes: \* Sears excludes original Kenmore ice and water filter cartridges from warranty coverage. \* The company offers expert service by its 12,000 professional repair specialists, including unlimited service and no charge for parts within a year of purchase. Installation instructions: \* Remove packing materials and tape carefully (page 38). \* Level the refrigerator using hex head driver adjustment screws (pages 40-41). \* Unplug power cord from power source before installation. \* Install hinge assemblies loosely with specified screws (pages 42-43). Note: This guide is available in multiple languages, including Spanish. The provided text appears to be a translation of the original user manual, with some minor adjustments for formatting and readability, align the right base of the handle with the Materials Needed tabs that are attached to the door, wearing gloves to protect your hands. To install the water supply, you'll need "outer diameter flexible copper tubing and a shut-off valve (which requires a X" hole to be drilled into the water supply line before attaching it). Always follow basic precautions to reduce the risk of injury or death. Your new refrigerator has two fresh food doors that can be opened or closed independently. The left door has a vertically-hinged section called SmartSeal, which forms a seal between the two doors when both are closed. Adjust the temperature controls 24 hours after adding food if you want to change the compartment temperatures. Make sure to follow the Temperature Control Guide table. The Dairy Center provides convenient storage for spreadable items like butter, but never attempt to adjust a shelf that's loaded with food. To remove the crisper drawers, lift the lid and pull them out to full extension. Turn off the automatic ice maker when shutting off the water supply for several hours, and always follow instructions on page 12 for connecting it to the water supply. Run water continuously through the dispenser to flush air from the system during initial use. Don't use the water filter without proper maintenance, as this can lead to serious illness or death. Always refer to the Water F ilter System Specification and Performance Data Sheet for details. For food storage tips, keep in mind that the fresh food compartment should be kept at a certain temperature, while frozen foods should be stored at an even lower temperature. Food Storage Tips Storage times are approximate and may vary depending on type of packaging, storage temperature, and quality of food when purchased. Butter: 1 month to 6 months, wrap tightly or cover. Milk and cream: not recommended for long-term storage. Vegetables: - Asparagus: 1-2 days, store in crisper, do not wash before refrigerating. - Brussels sprouts, broccoli, cauliflower, green peas, lima beans, onions, peppers: 3-5 days, wrap odorless foods, leave peas in pods. - Cabbage, celery: 1-2 weeks. For repair of all major appliances and equipment sold by any brand, including lawn and garden items and heating/cooling systems, you can purchase replacement parts and accessories from Sears. DIY manuals are also available for your reference. However, for professional installation of home appliances, please refer to page 65 of the safety instructions or contact a Sears representative.

Kenmore 596 diagnostic mode. Kenmore model 596 fridge not cold. Why is my kenmore washer not working. Kenmore model 587 dishwasher troubleshooting. Kenmore 596 manual. Kenmore elite model 790 troubleshooting. Kenmore model 596 manual. Kenmore refrigerator model 596 troubleshooting.